

EN

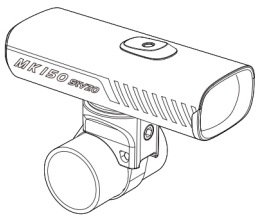

MK 150 StVZO

USER MANUAL

⚠ BEFORE FIRST USE

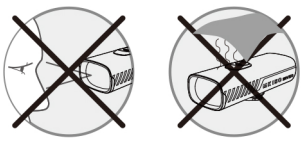

Be sure to charge the light before first use, according to the instructions "HOW TO RECHARGE".

IN THE BOX




MK 150 StVZO



Handlebar mount



USB-C charging cable



Handlebar straps

3mm hex key

OPERATING INSTRUCTIONS

ON/OFF: Press and hold the switch to turn the light on/off, the default output is the last selected brightness when turned off.

ADJUST BRIGHTNESS: When the light is on, single press the "﹀" or "︿" switch to change brightness level. The output brightness will cycle through Low →High→Low...


OUTPUT / RUNTIME

MODE	**LOW**	400LM	4.5h
	HIGH	700LM	2.1h

*All data are measured in accordance with ANSI/NEMA FL 1-2009. The test was conducted at a temperature of 25ºC and a wind speed of 25 km/h. The runtime may vary depending on external temperature and ventilation conditions, and these deviations may affect the result of testing.


ALIGNING THE HEADLIGHT

1. Place the wheel 2.5m in front of a wall and point it towards this wall.
2. Turn on the headlight.
3. Mark the light-dark boundary of the light cone on the wall. This is the line where the light cone stops at the top and is bright below.
4. This line must be 7cm below the mounting height.
5. Mount the headlight so that the light cone always maintains this position.

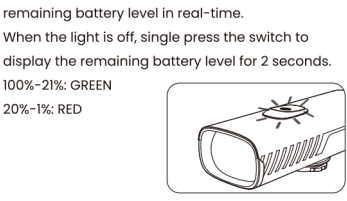

CHARGING / BATTERY INDICATOR


Standard charging time approx. 3.5 hours (5V 2A)
Charging: Flashing red
Fully charged: Constant green

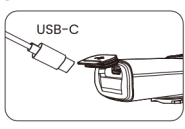

BATTERY INDICATOR

When the light is on, the indicator will display the remaining battery level in real-time.
When the light is off, single press the switch to display the remaining battery level for 2 seconds.
100%-21%: GREEN
20%-1%: RED

PHONE CHARGING INSTRUCTIONS

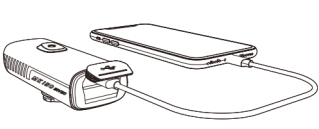

(5V 3A)

Note:
Discharging cable need to be purchased separately.

HOW TO INSTALL

